Made with love by
≥adaptdefy*

LapStacker Flex

Installation Guide

Contents Page

Congratulations and thank you for choosing to install a LapStacker on your wheelchair.

Please read this installation guide carefully to ensure your LapStacker is installed and used correctly and safely.

Contents	Page
Warnings	2
Components	4
Optimal Location	6
Install Orientation	7
Check Clearance	9
Buckle Holder Selection	11
LapStacker Horizontal Installation	14
LapStacker Vertical Installation	24

By using your LapStacker you agree to the terms of our Warranty and Product Disclaimer which can be read online at https://adaptdefy.com/pages/lapstacker-warranty-disclaimer

Warnings - Please read carefully

Warnings - General

- LapStacker is not a seatbelt, safety device, or medical device.
- LapStacker is designed as an aid only.
- Do not use your LapStacker to secure people or animals.
- Carefully place and monitor items as they can still move, even when secured.
- Do not exceed any wheelchair manufacturer's guidelines for loading or attachment use.
- Do not apply excessive force to the LapStacker or its components. It is not designed to support body weight.
- Do not release the LapStacker straps and allow them to retract without control, as this
 may cause damage over time.
- In no event shall our company be liable for any direct, indirect, punitive, incidental, special, or consequential damages to property or life resulting from the use or misuse of our products.
- Do not lift or move the wheelchair by the LapStacker straps, as this may cause damage.

Warnings - Maintenance

- Clean components using a damp cloth only. Avoid using chemical cleaners on plastic surfaces.
- To clean the straps, use water and a cloth. Fully extend the straps to dry, and ensure they are completely dry before retracting.

Warnings - Please read carefully

Warnings - Injury


- Do not use your LapStacker to secure items that could cause injury, such as sharp, hot or heavy objects.
- Over-tightening the LapStacker straps may cause loss of circulation, pressure injury, or damage to items being carried.
- Avoid contact with your LapStacker during transfers to prevent injury or damage.
- Avoid extended use, which may cause loss of circulation or pressure injury.
- Do not stack items too high, as this may limit visibility and increase the risk of collision or injury.

Warnings - Installation


- If moving existing wheelchair components (e.g. armrests, leg restraints), ensure they are reinstalled securely to avoid failure and injury.
- The LapStacker Retractor is not designed for submersion. Water damage may void the Warranty.
- LapStacker is not designed for use in environments below -15°C (5°F) or above 45°C (113°F).
 Use outside this range may cause damage and may void the warranty.
- Do not over-tighten the tension straps during installation, as excessive force may damage the components and will void the warranty.

LapStacker

COMPONENTS

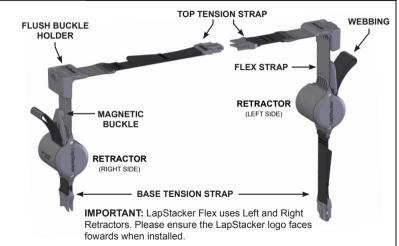

COMPONENTS (Continued)

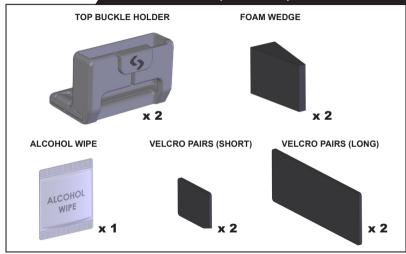

1. FIND OPTIMAL LOCATION

- LapStacker is best installed inline with the centre of where you will carry items, but will still work if forward or back of this.
- Locate this central point on your wheelchairs top tube.



2. SELECT INSTALL ORIENTATION

RIGID CHAIRS

Single tube frames

HORIZONTAL INSTALL



Dual, non parallel tube frames

HORIZONTAL INSTALL



LapStacker

FOLDING CHAIRS

Single tube frames

HORIZONTAL INSTALL




Parallel dual tube frames

VERTICAL INSTALL



3. CHECK CLEARANCE - HORIZONTAL

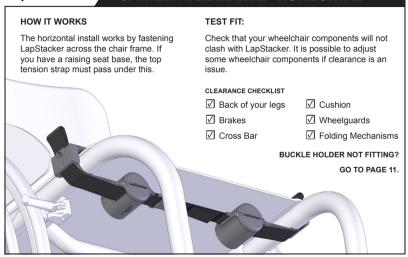

- VERTICAL


Check that your wheelchair components will not clash with LapStacker. It is possible to adjust some wheelchair components if clearance is an issue

CLEARANCE CHECKLIST

- ☑ Back of your legs
- ✓ Brakes
- ✓ Seat Frame
- ✓ Folding Mechanisms
- ✓ Cushion
- ✓ Wheelguards

BUCKLE HOLDER NOT FITTING?

10

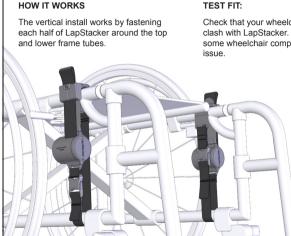


4. SELECT BUCKLE HOLDER

FLUSH BUCKLE HOLDER

The Flush Buckle Holder comes installed as standard with your LapStacker and will suit 80% of installs.

If clearance is an issue, you may consider using the Top Buckle Holder.

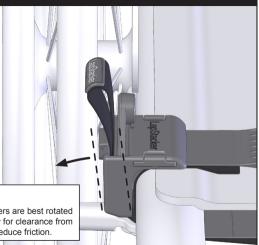


IMPORTANT

The buckle holders are best rotated outwards slightly for clearance from cushion and to reduce friction.


TOP BUCKLE HOLDER

The Top Buckle Holder sits above the frame top tube and has three adjustment positions to shift the keeper left to right.

The adjustment can be used to create clearance from your wheel guards, brakes, seat frame or cushion etc.

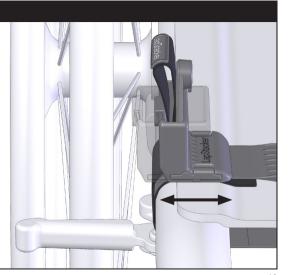

TOP BUCKLE HOLDER (OPTIONAL INSTALLATION)

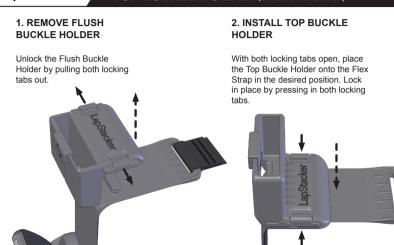


HORIZONTAL INSTALLATION




The wheelchairs depicted are for illustration purposes only. These instructions will work for whatever chair type you own.


LapStacker⁻ HORIZONTAL INSTALLATION **FIXED SEAT BASE** RAISING SEAT BASE


If you have a raising seat base, the LapStacker must pass under the seat base. Adapt install steps to suit.

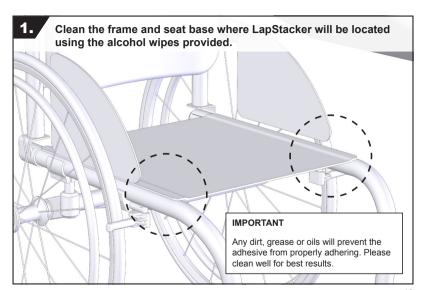


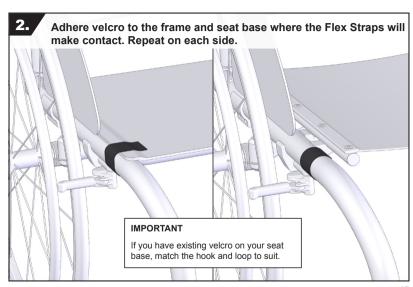



3. Adhere velcro to both LapStacker Flex Straps.

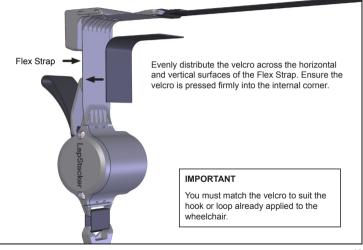


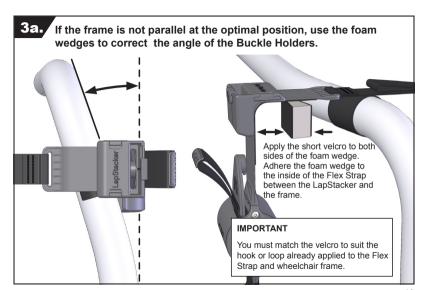

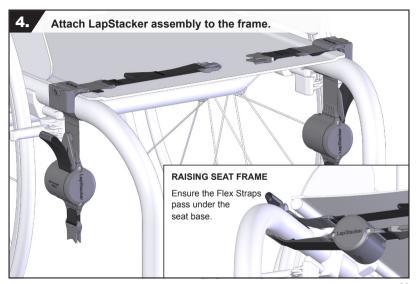


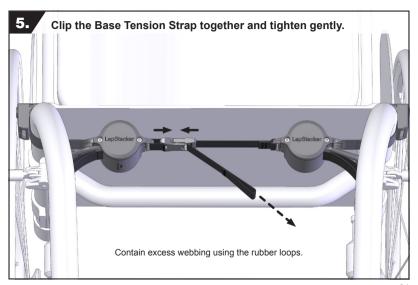

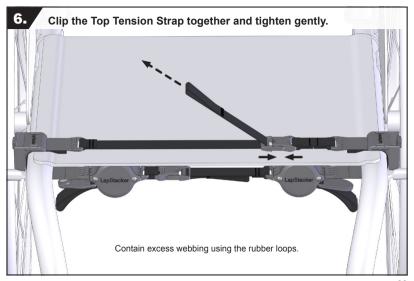


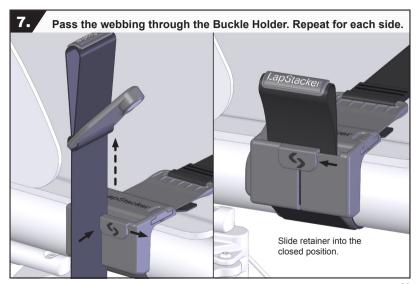


VERTICAL INSTALLATION

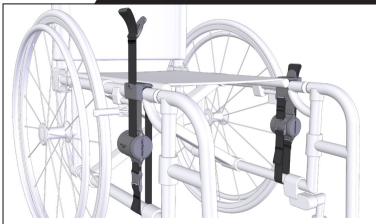



The wheelchair depicted is for illustration purposes only. These instructions will work for whatever chair type you own.

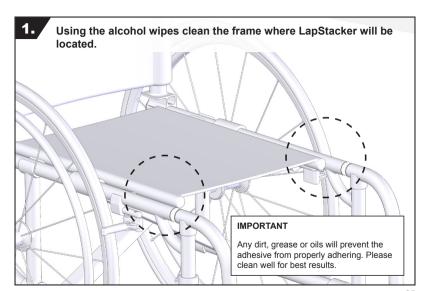


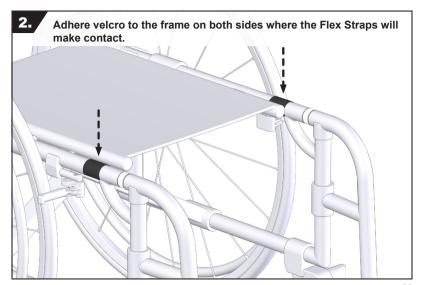


3. Adhere velcro to both LapStacker Flex Straps.

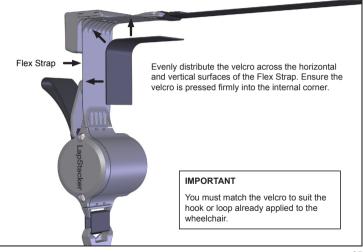

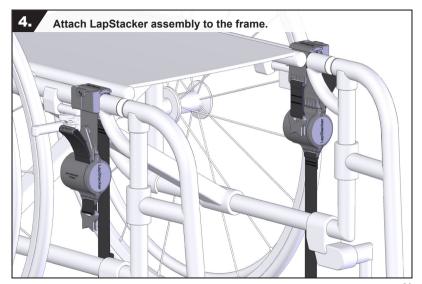

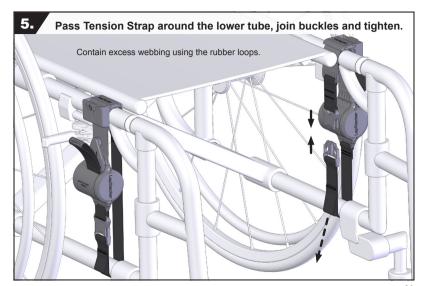

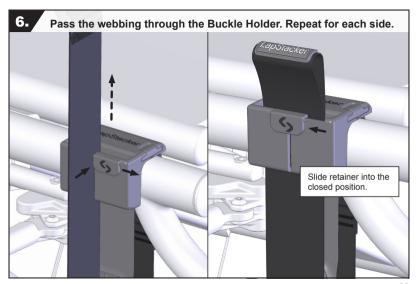

Further Information

≥adaptdefy^{*}

adaptdefy.com info@adaptdefy.com









@adaptdefy

@adaptdef

@adaptdef

Wadapidei

Scan for installation and troubleshooting tips.

